
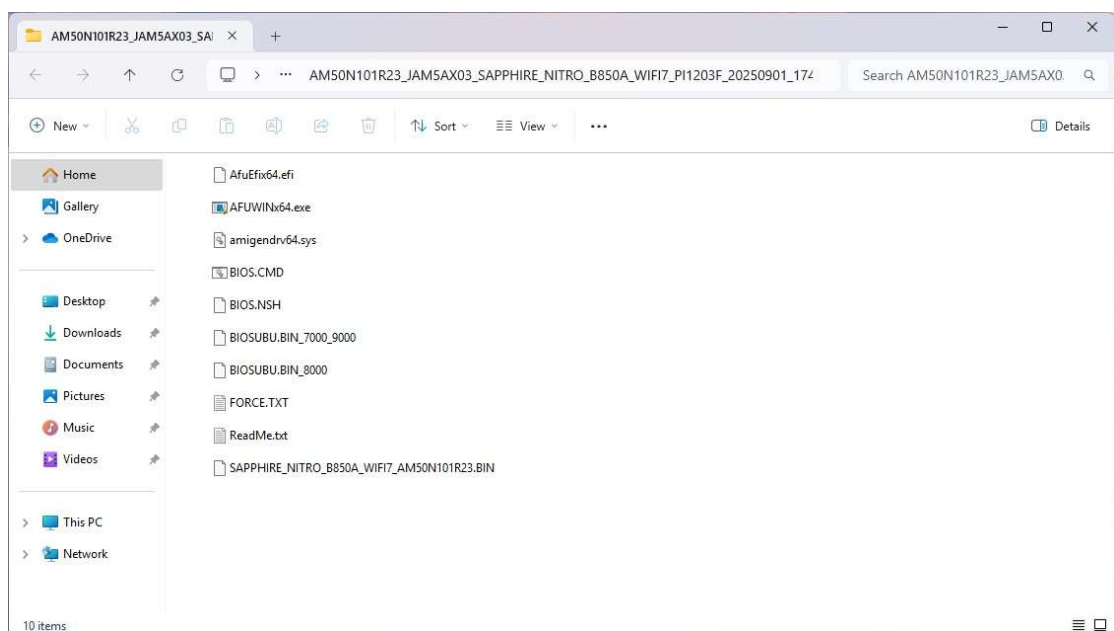


1. Copy the BIOS file to your Windows Desktop and extract it:


Locate the downloaded file, example:

AM50N101R23\_JAM5AX03\_SAPPHIRE\_NITRO\_B850A\_WIFI7\_PI1203F\_20250901\_174509.zip


Right-click it and select Extract All... to unpack the contents.

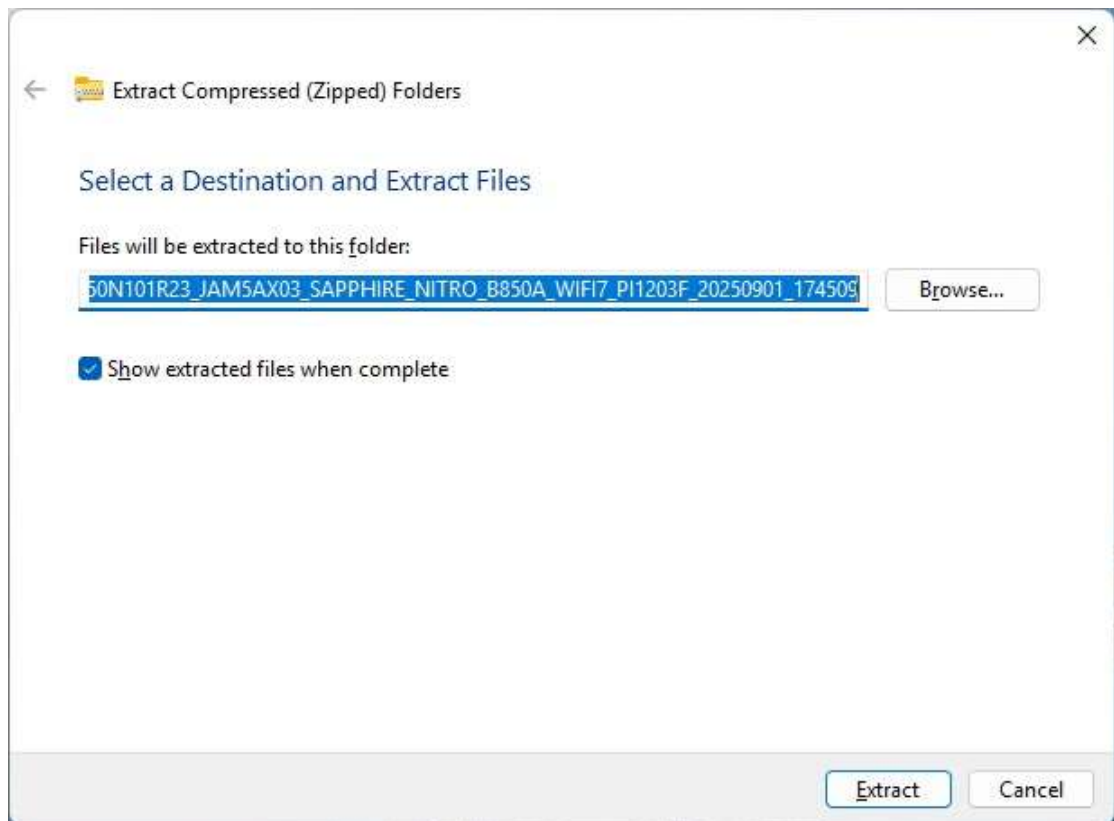

2. Make sure your system is running on stable power before continuing.  
Right-click the BIOS.CMD file and select Run as administrator.

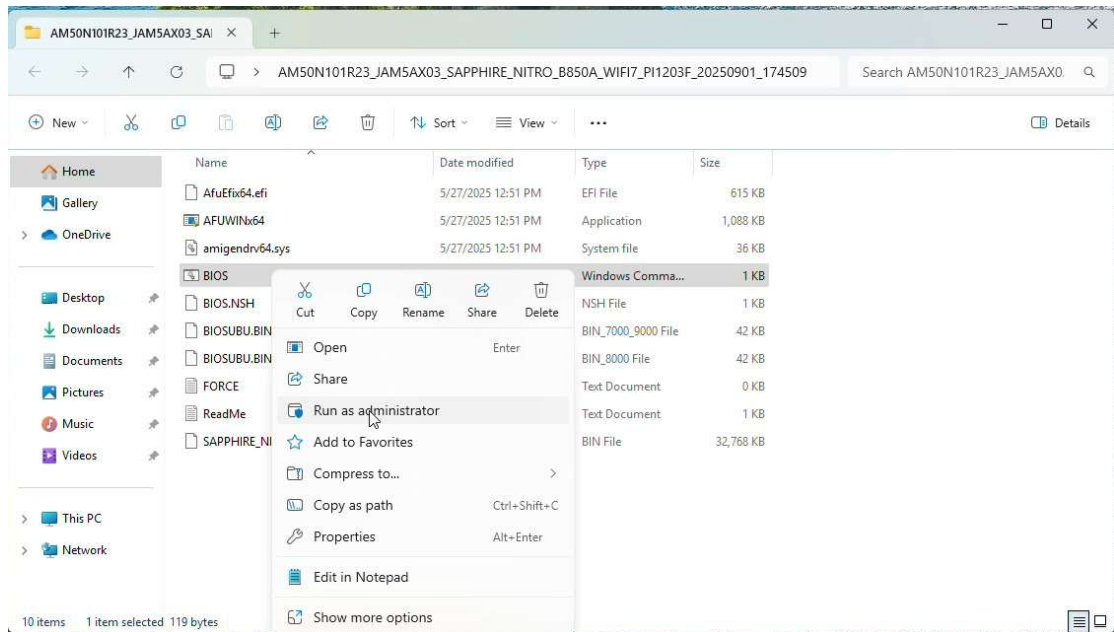

3. Wait a few minutes while the BIOS update process completes.  
The system will restart automatically once the update is finished.  
After reboot, press Win + R, type msinfo32, and press Enter to verify the BIOS version.

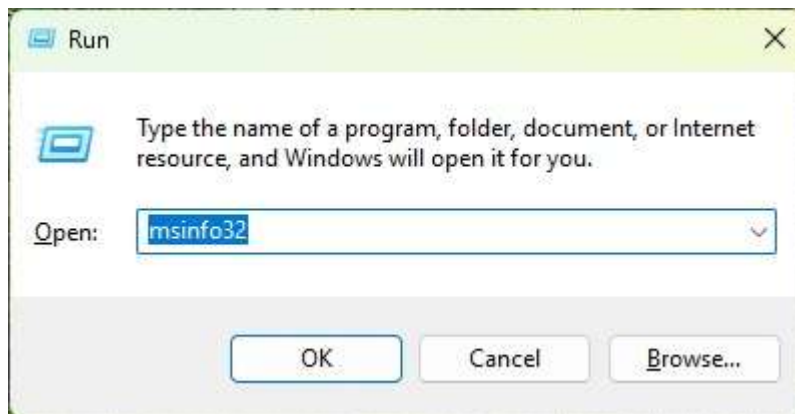

#### 4. The BIOS update is now complete.

